



Solace Domestic

Installation & Operation Manual



Contents

| | |
|---------------------------------|----|
| 1. Introduction | 2 |
| 2. Unit Specifications | 3 |
| 2.1 Working Principle | 3 |
| 2.2 Hygrostat Control | 3 |
| 2.3 Dimensions | 3 |
| 2.4 Performance Curve | 4 |
| 3. Safety Instructions | 4 |
| 4. Installation | 5 |
| 4.1 Location | 5 |
| 4.2 Minimum Clearances | 5 |
| 4.3 Drainage | 6 |
| 4.4 Wall Mounted Installation | 6 |
| 5. Operation | 7 |
| 5.1 Main Controller Interface | 7 |
| 5.2 Functions of the Controller | 7 |
| 5.2.1 Power On/Off | 7 |
| 5.2.2 Set Relative Humidity | 8 |
| 5.2.3 Dehumidifying Mode | 8 |
| 5.2.3 Defrosting Mode | 8 |
| 5.2.5 Malfunction Display | 8 |
| 6. Troubleshooting | 9 |
| 7. Appendix | 10 |
| 7.1 PCB I/O Port | 10 |
| 8. Maintenance | 11 |
| 9. Warranty | 12 |
| 9.1 Warranty Registration | 12 |

1. Introduction



This manual contains all the necessary information in regard to the installation, troubleshooting, operation and maintenance of this unit. Ensure instructions in this manual are adhered to at all times. Failing to comply with these recommendations will invalidate the warranty. This manual and all others are available for download on our website.



The Solace Domestic series dehumidifier is designed to remove the moisture from the air in the room without losing the warmth contained within. The warm moist air is drawn through the base of the unit and passes over a cold coil to remove the moisture and chemicals. The air then passes through a hot coil which replaces and increases the heat in the air. The result – warmer drier air. This product strictly complies with design and production standards to provide perfect performance and high reliability.

Packing List


Fig.1
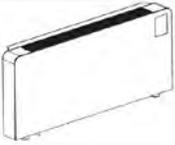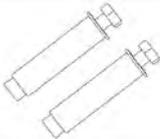
| | | | |
|---|---|---|---|
| Main unit | Wall suspension bar | Manual | Expansion bolts |
|  |  |  |  |
| Drainage pipe | Condensing water collector | | |
|  |  | | |

2. Unit Specifications

2.1 Working Principle

The Solace Dehumidifier works by drawing moist air over a refrigerated coil with a small fan. The cold coil of the refrigeration device condenses the water, which is removed. Then the air is reheated by the hot coil. This process works most effectively with higher ambient temperatures with a high dew point temperature.

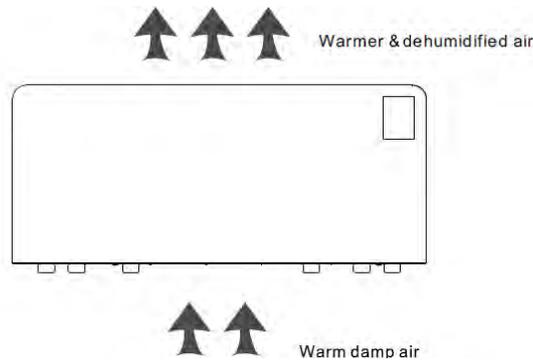


For best results we recommend that the room temperature is maintained within 5 degrees of the pool temperature.


2.2 Hygrostat Control

The dehumidifier is controlled by a built-in hygrostat set on one side of the unit. The target RH value can be set in ranged from 30% to 90%.

The unit will not start to dehumidify until the actual RH is beyond the setting value. We recommend that an external hygrostat should be installed to ensure a constant measure of the humidity in the pool area. The location of the hygrostat is as following:

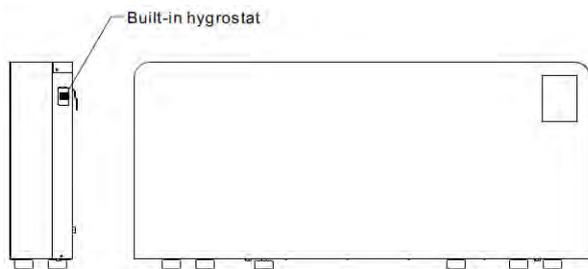


2.3 Dimensions

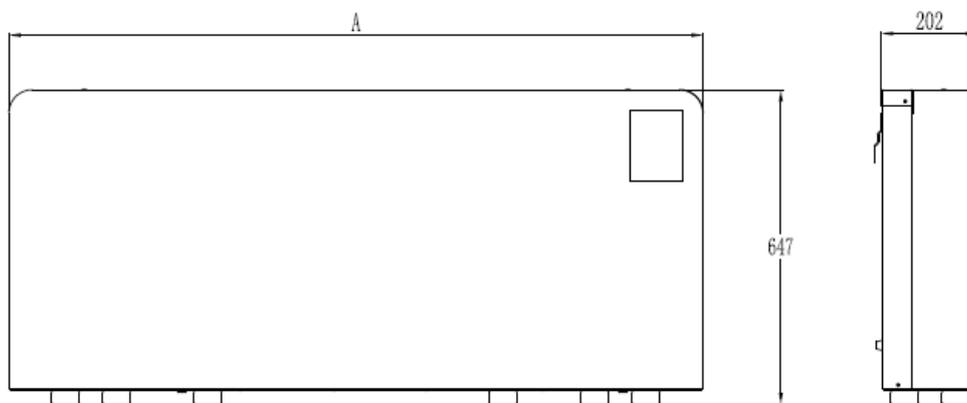

| | |
|-----------|------------|
| | Solace 4.3 |
| Length: A | 1495 |

2.4 Performance Curve

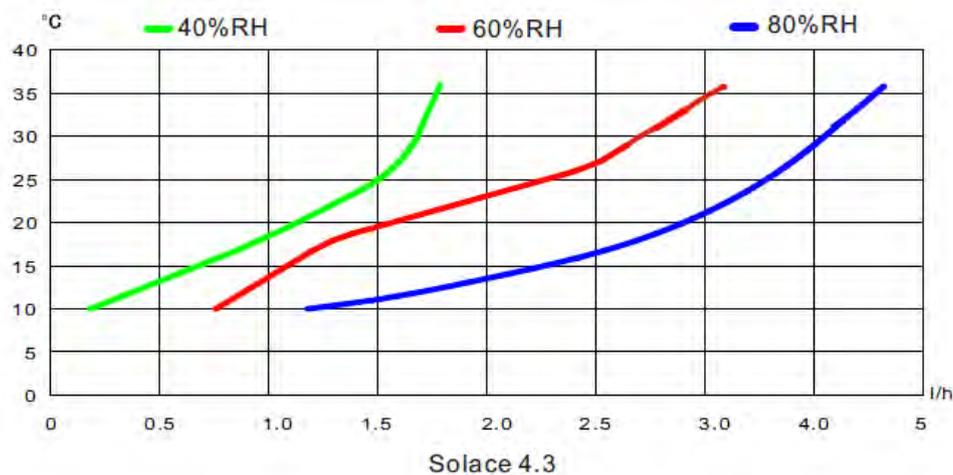

3. Safety Instructions

- Installation, repair or relocations must be done by a fully qualified person and not by the customer. If done incorrectly it may cause fire, electric shock, water leakage and other hazards.
- Maintenance and operation must be carried out according to the recommended time and frequencies, as stated in this manual.
- To avoid risk of electrical shock, the unit must have a good power connection and earthing.
- If the supply cord is damaged, it must be replaced.
- Use genuine standard spare parts only.
- When an abnormality (smell of burning, etc.) occurs, stop the unit and disconnect the power or turn off the breaker. If the unit continues to be operated in an abnormal condition, it may cause a fire or hazards.
- For unit cleaning or maintenance, switch off and disconnect the power of the unit.
- Do not install the unit near flammable gas or spray flammable substances near it.
- Ensure the unit is installed on a strong and stable platform.
- A circuit breaker must be installed for the unit.
- Use a suitable fuse. Copper or iron will cause a failure or possibly a fire.
- Do not operate the unit with wet hands.
- Do not perform any modifications of safety or adjustment devices without authorisation.
- Even if the unit is disconnected from the mains supply, do not pull, cut or knot the electrical cables coming out of the unit.
- Do not poke objects through the inlet and outlet grills.
- Leaving packing materials in reach of children is a source of danger and they should be disposed of.
- Do not climb onto the appliance or rest any object on it.
- External parts of the unit can reach temperatures of more than 70°C, never touch it with your hands!
- The unit must be installed in accordance with national wiring regulations.

* Caution: Single wall heat exchanger, not suitable for potable water connection.

4. Installation

4.1 Location

Avoid installing the unit in close proximity to:

- Positions subject to exposure to direct sunlight
- Sources of heat
- Oil Fumes
- Areas subject to high frequencies


Ensure that:

- The wall on which the unit is installed is strong enough to support the weight of the unit
- The part of the wall that the unit is installed does not have pipes or electrical wires passing through
- The wall is perfectly flat
- There are no obstacles around the unit that could interfere with the inlet and outlet air flow.
- It is preferable there is an outside perimeter-wall to allow the discharge of condensation outside.

4.2 Minimum Clearances

Removing the four-rubber foot of the unit are suggested if it is hanging on the wall.


The following figure indicated the minimum mounting distances between the wall-mounted Solace Dehumidifier and furniture in the room.

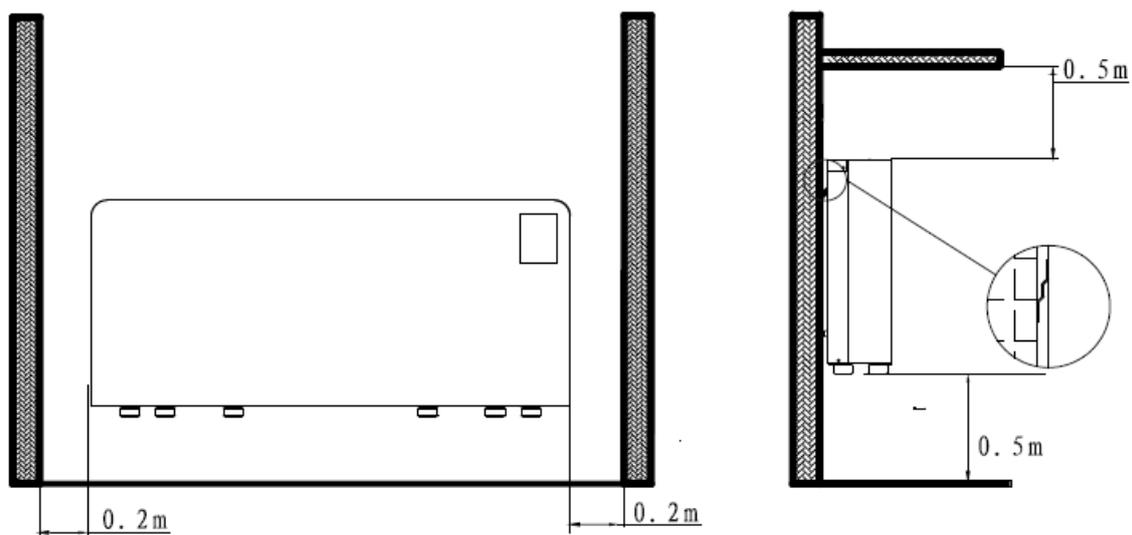

4.3 Drainage


Select a suitable size hose to connect to the built-in hose if it is needed.

NOTE: If the condensation water discharges directly into a container, the condensate outlet should be located above the container to avoid it immersing in the container.

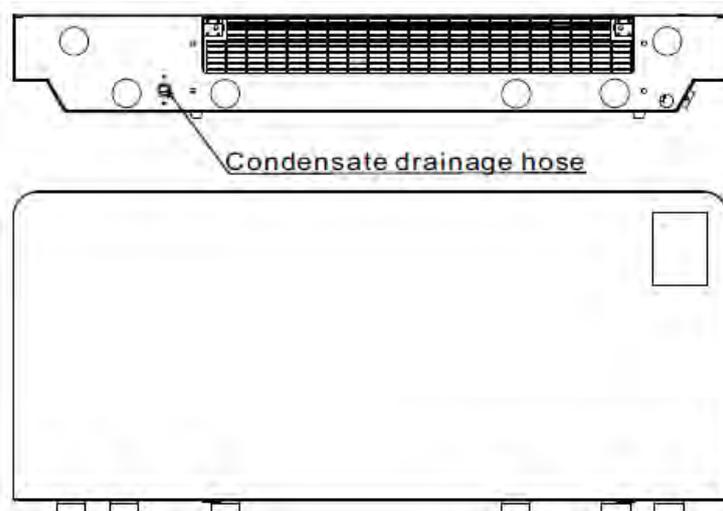


4.4 Wall Mounted Installation

Insert 5 expansion bolts into holes with are bored by 10 drill and fix the wall suspension bar horizontally.

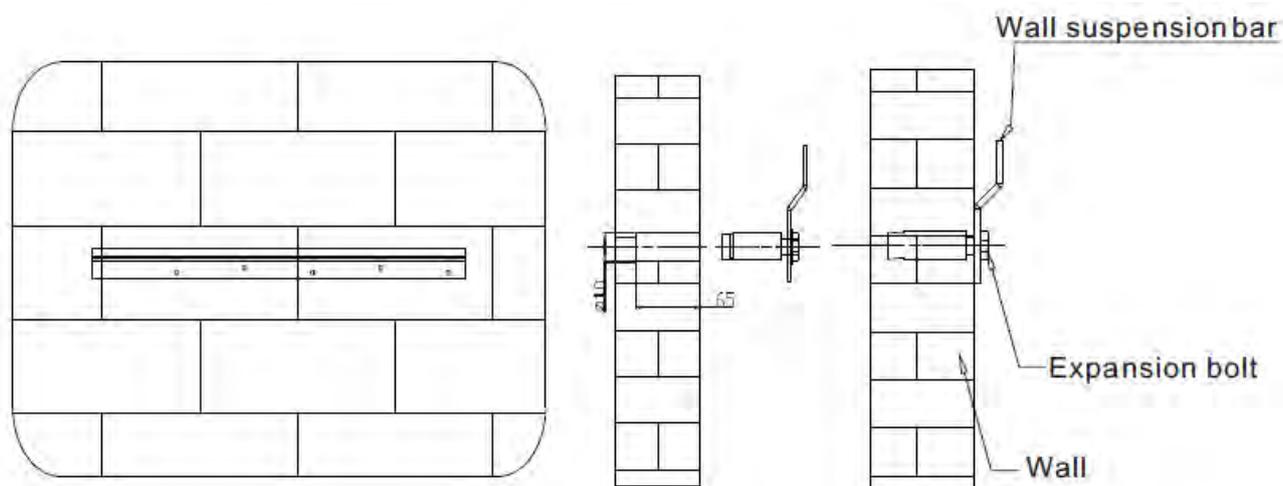

5. Operation

5.1 Main Controller Interface

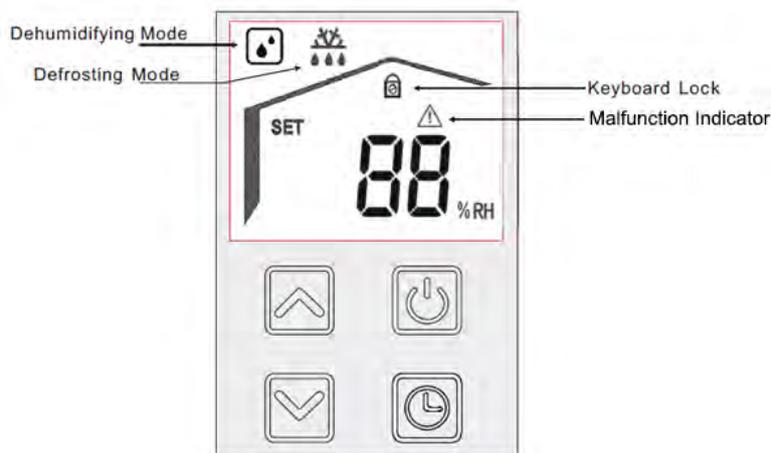

ON/OFF

- Press this button to start up or shut down the unit.
- Hold this button for 5 seconds to lock or unlock the keyboard.



UP

- Press this button to check the relative humidity target value
- Press this button again to increase relative humidity target value



DOWN

- Press this button to check relative humidity target value
- Press this button again to decrease relative humidity target value



TIMER

- When the unit is off, you can set a start-up time by pressing this button
- When the unit is on, you can set a shutdown time by pressing this button

NOTE:


When the unit starts, the user must wait 15 seconds until the unit shows the exact ambient relative humidity. During this time, the user cannot operate the control panel and the screen will show 8.8. After non-operation for 90 seconds the unit keys will light-off. If you touch the keys after this time, the keys will light back up again allowing you to operate the control panel.

5.2 Functions of the Controller

5.2.1 Power On/Off


To turn the unit on & off, press the power button.

When the unit is on, the display will show the current ambient relative humidity, the mode icon and power button will also be lit up.

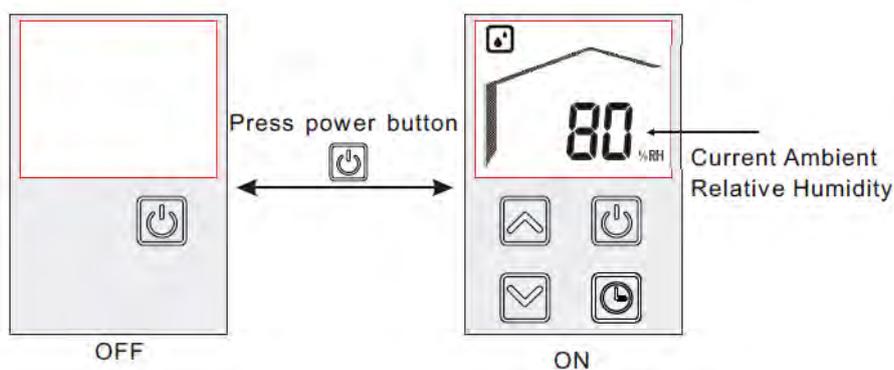

5.2.2 Set Relative Humidity

To check the relative humidity, press the UP or DOWN arrow keys. Once the relative humidity is displayed, you can press the UP or DOWN arrows again to adjust it as desired. If no operation is performed within 5 seconds, the screen will return to the home screen and save any changes made automatically.

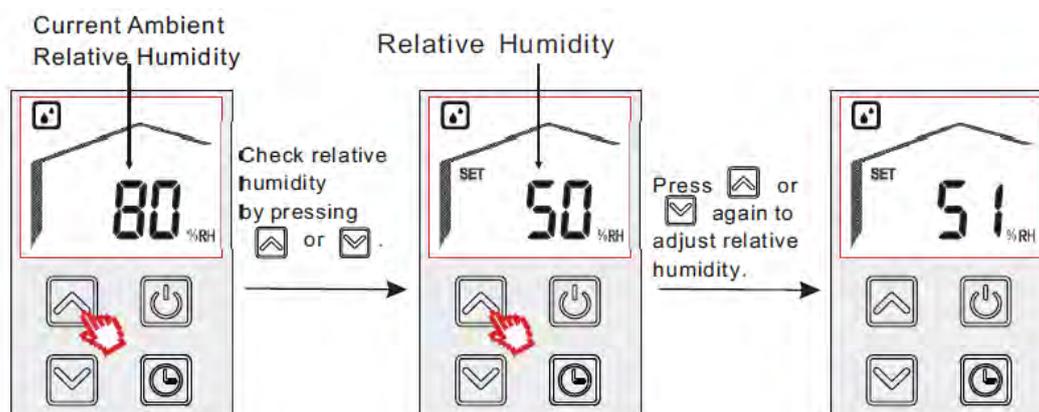


5.2.3 Dehumidifying Mode

When the unit is in dehumidifying mode, the LED icon  lights up and:

1. If A (actual relative humidity of the room air) \geq TRH (target relative humidity) + 5% RH, and the condition has lasted for 30 seconds – the unit will begin to dehumidify.
2. If A (actual relative humidity of the room air) \leq TRH (target relative humidity) - 5% RH, and the condition has lasted for 3 minutes – the unit will cease dehumidifying.

5.2.3 Defrosting Mode

When the ambient temperature is low, for example 11°C, and after the unit has worked for an extended period of time, there is a possibility that the evaporator will begin to ice up. When this happens, the unit will switch to defrosting mode automatically. During defrosting the  icon will be lit up. When defrosting is over, the unit returns to dehumidifying mode.

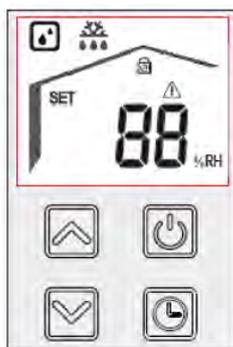

5.2.5 Malfunction Display

If a problem occurs with the unit, the control panel will display a relative problem code. See 6. *Troubleshooting* for failure codes, their definitions and solutions.



6. Troubleshooting

Press the “UP” or “DOWN” key to check if there are any more failure codes.

The solutions to the problems can be found with their corresponding code.

| Malfunction | Code | Reason | Solution |
|--|------|--|---|
| High pressure protection has appeared 3 times in 30 mins | P1 | High pressure protection is too frequent | Check the below solutions to failure P1/P2/P3 |
| High pressure protection | P2 | Discharge pressure is too high | |
| Condenser outlet temp. over high | P3 | Condenser coil temp. is too high | |
| Evaporator outlet temp. sensor failure | P5 | This temp. sensor is broken or in open/short circuit | Check or replace temp. sensor |
| Evaporator inlet temp. sensor failure | P6 | This temp. sensor is broken or in open/short circuit | Check or replace temp. sensor |
| Condenser outlet temp. sensor failure | P7 | This temp. sensor is broken or in open/short circuit | Check or replace temp. sensor |
| Humidity sensor failure | P8 | Humidity sensor is broken or in open/short circuit | Check or replace humidity sensor |
| Motor feedback signal failure | E0 | The feedback wiring has a bad connection or fan motor is damaged | Check the feedback wiring of the fan motor or replace the fan motor |


Solution to failure P1/P2/P3:

- 1) If P1/P2/P3 appears together with other failures, please solve the others first.
- 2) If there is no other failures of P3~E0, and P1 & P2 still exist, please disconnect the power to the unit and connect again after 1 hour.
- 3) If only P3 exists, please keep the fan running for 30 mins. If P3 still exists after the running, please disconnect the power to the unit and connect again after 1 hour.

Note: Please contact Technical Service if failures cannot be solved.

7. Appendix

7.1 PCB I/O Port

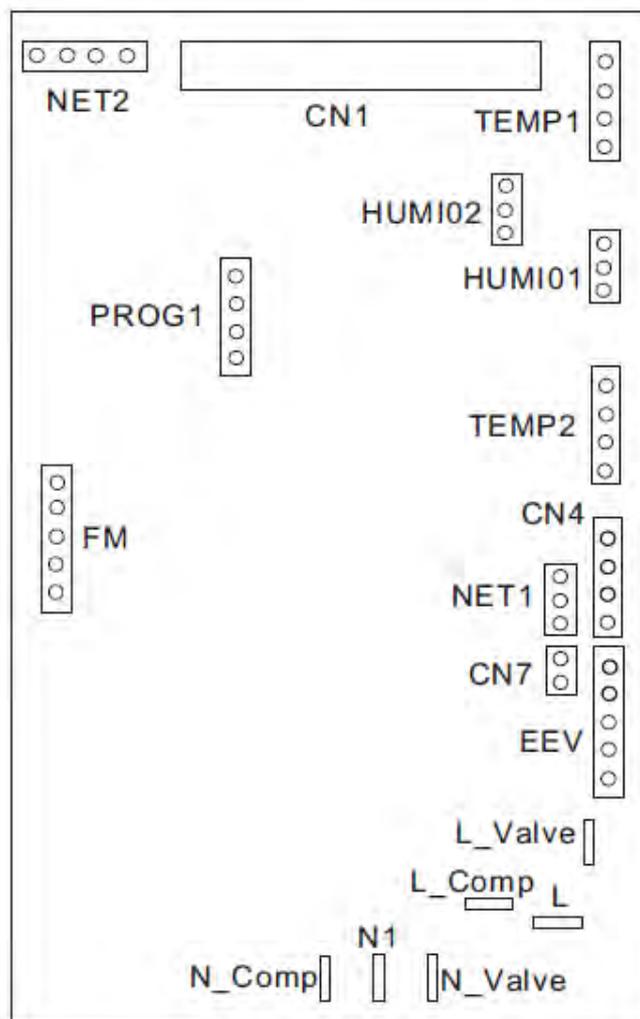






| NO | Ports | Meaning |
|----|-------------------------|---|
| 1 | Cn1 | To operation panel |
| 2 | CN4 NET1 NET2 | Reserved |
| 3 | FM | To fan motor (DC) |
| 4 | TEMP1 | To evaporator inlet/outlet temp. sensor |
| 5 | TEMP2 | To condenser outlet temp. sensor |
| 6 | HUMI01 | To the build-in RHS (Refer to 7.2) |
| 7 | HUMI02 | To the external RHS (optional) |
| 8 | CN7 | To high-pressure protection switch |
| 9 | EEV | To electronic expansion valve |
| 10 | PROG1 | Program burning port |
| 11 | L | To the live wire of power supply |
| 12 | N1 N_Comp N_Valve | Neutral wire |
| 13 | L_Comp | To the live wire of compressor |

8. Maintenance

To ensure that the unit stays reliable and works to the best of its ability, it is suggested that the unit is maintained and cleaned every six months.

Please adhere to the following steps to clean the strainer regularly.

- 1) Press the two red buttons and drag it down slowly (Fig 8)
- 2) Separate the return air filter screen from the units as the image shown below (Fig 9)
- 3) Takeaway the return air filter screen and flush it with water (Fig 10)
- 4) Set the filter net and the air return grill to the original place and press the limiting pin (Fig 11)
- 5) Clean up the outer unit with a soft and damp rag (Fig 12). To protect the paint coat on the unit, don't use a rough sponge or corrosive detergent.

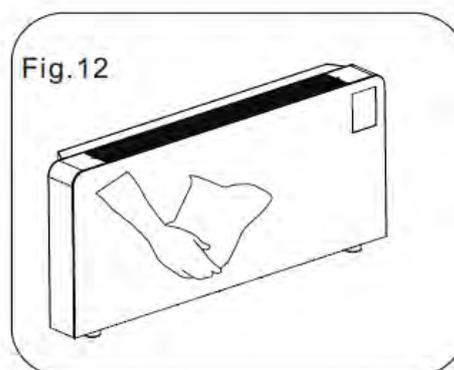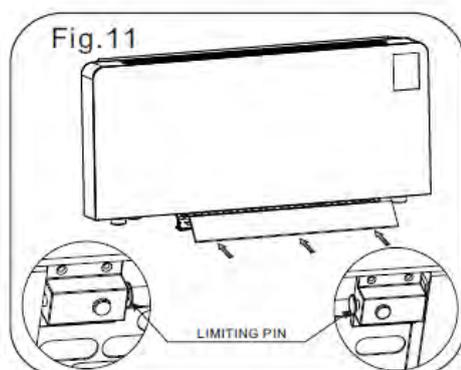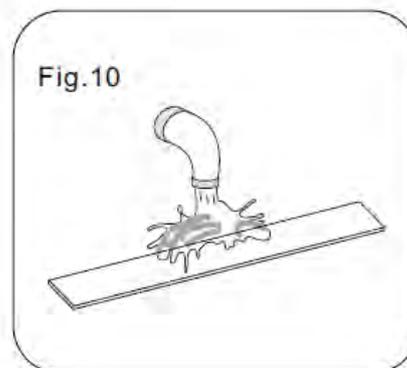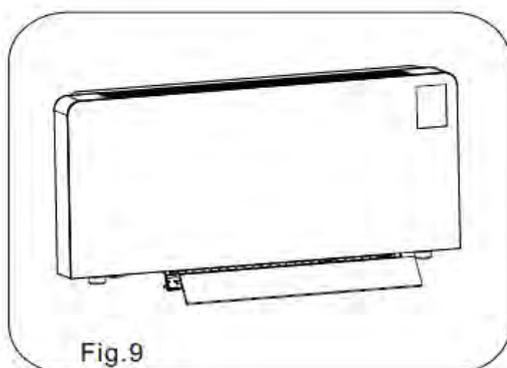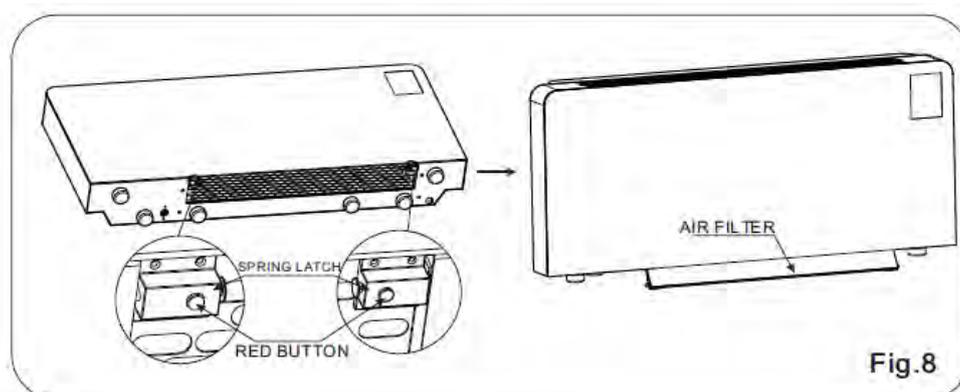

 **Warning:** Cut off power supply before cleaning or maintaining the unit.

9. Warranty



Please refer to the EvoHeat website for warranty details

- Australia: www.evoheat.com.au
- South East Asia: www.evoheat.com.sg

1. Warranty terms are from date of purchase.
2. This warranty excludes any defect or injury caused by or resulting from misuse, abuse, neglect, accidental damage, improper voltage, vermin infestation, incompetent installation, any fault not attributable to faulty manufacture or parts, any modifications which affect the reliability or performance of the unit.
3. This warranty does not cover the following:
 - a. Natural Disasters (hail, lightening, flood, fire etc.)
 - b. Rust or damage to paintwork caused by a corrosive atmosphere
 - c. When serviced by an unauthorized person without the permission of Evo Industries
 - d. When a unit is installed by an unqualified person
 - e. Where a unit is incorrectly installed
 - f. When failure occurs due to improper or faulty installation
 - g. Failure due to improper maintenance (refer Operating Instructions)
 - h. 'No Fault Found' service calls where the perceived problem is explained within the
 - i. Costs associated with delivery, handling, freighting, or damage to the product in transit.
4. If warranty service is required you should:
 - a. contact Evo Industries Australia on 1300 859 933 or via our Contact page on our web site
 - b. provide a copy of your receipt as proof of purchase
 - c. have completed the online warranty registration or provide a completed warranty card.
5. Onsite technical service is available within the normal operating area of your Evo Industries authorized Service Centre. Service outside this area will incur a traveling fee.
6. Unless otherwise specified to the purchaser, the benefits conferred by this express warranty and additional to all other conditions, warranties, rights and remedies expressed or implied by the Trade Practices Act 1974 and similar consumer protection provisions contained in legislation of the States and Territories and all other obligations and liabilities on the part of the manufacturer or supplier and nothing contained herein shall restrict or modify such rights, remedies, obligations or liabilities.

9.1 Warranty Registration

EvoHeat highly recommend customers to complete their warranty details online to ensure efficient warranty claim processing.

To register your warranty, scan our QR Code or head to our website and fill in the Warranty Registration Form: <https://evoheat.com.au/warranty-registration/>

